


Photoluminescent UL924-listed **EXIT Signs** • UL1994-listed Luminous **Egress Path Markings** • Wall & Floor Tapes • Metal Stair Nosing • Floor Identification Signs

Photoluminescent Printable Substrates: Flexible Films • Rigid Sheets • Aluminum • Masterbatch • Corner & Wall Guards •... and many more SAFETY items



2531 W 237<sup>th</sup> Street #101 • Torrance, CA 90505-5245 • Tel 310-891-0924 • Fax 310-891-0996 • www.americanpermalight.com

Installation Instructions UL924 Plastic Exit signs  
 in SILVER Frame: 600126, 600127, 600128, 600129  
 in BLACK Frame: 600111, 600112, 600113, 600114

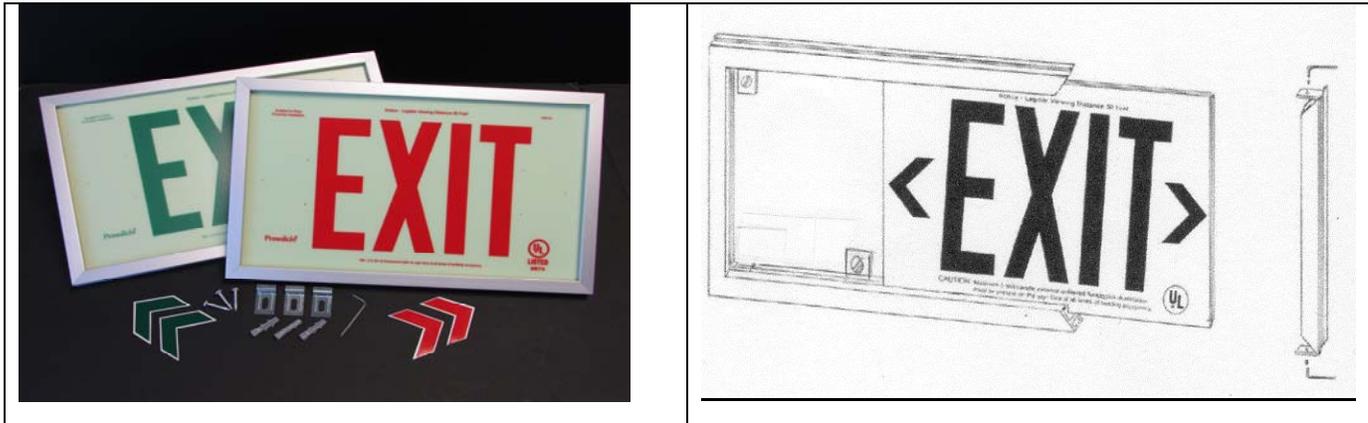

**Flat Wall Mount**

- Open the PERMALIGHT® frame by loosening the two socket set screws (do not fully remove the small screws) using the Allen wrench supplied inside the packing unit. Remove the aluminum side bar. Remove UL924-listed EXIT sign and its white backing panel.




- Position empty frame in its intended installation location.
- Using a level, confirm accurate positioning of frame. Temporarily secure frame in its location using masking tape.




- Position one tab in each of the two upper corners: mark location of tabs using a pencil.

- Drill two holes, insert anchors, affix tabs using screws supplied inside packing unit.

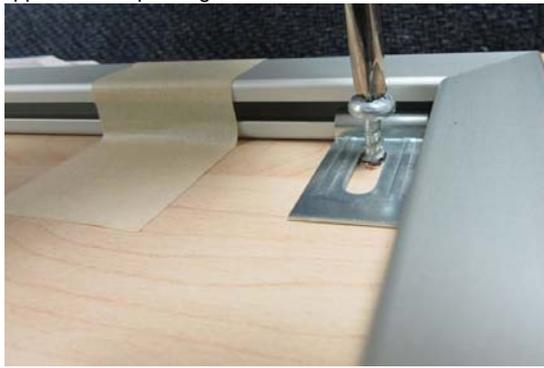

- Hang empty frame onto the two upper tabs. Now mark a center location of the ONE lower tab along the inside of the frame's low bar, drill one hole, insert the anchor and affix the one centrally positioned lower tab as well.
- The frame is now hanging firmly on the two upper tabs and one lower tab. Remove the temporarily used masking tape.
- Insert white backing panel into frame.

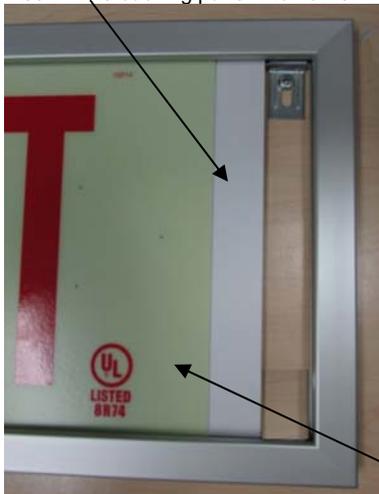

- Next insert the UL924-listed EXIT Sign in the front.
- Close the open side of the frame by sliding the aluminum side bar back in place. Tighten the socket set screws using Allen wrench.
- Wipe off any fingerprints using a non-abrasive damp cloth.

### Ceiling Mount or Perpendicular Wall Mount

- Position bracket (600055 or 600056 or 600057) in desired location under the ceiling or Bracket 600055 on the wall, mark the Bracket's two screw holes with a pencil, then drill the holes, insert the anchors and affix the bracket with the two screws that were supplied inside the exit sign 'accessory' packing unit.
- For CEILING MOUNT, open the EXIT sign frame side bar by loosening the two socket set screws (do not fully remove the small screws) using the Allen wrench supplied. For PERPENDICULAR WALL MOUNT, open and remove the upper frame bar.
- While the aluminum frame is open, insert white backing panel into frame.
- Next insert in the front the UL924-listed EXIT sign.
- If you are installing a **double-sided** sign, you do not require the white backing panel. Simply insert another UL924-listed EXIT sign facing the other direction.
- Now slide the silver-colored bracket into the frame bar and tighten the center socket set screw with the Allen wrench.
- Close the open side of the frame by sliding the aluminum bar back in place. Tighten the two socket set screws using the Allen wrench.
- Once the frame is closed, wipe off any fingerprints using a non-abrasive damp cloth.

<p><b>UL924-LISTED EXIT SIGN in sturdy, durable ALUMINUM FRAME</b> with installation accessories (3 clips, 3 screws, 3 anchors, 1 Allen wrench) for hidden flat wall mount: once installed, neither screw heads nor clips visible for an elegant and tamper-resistant sign installation.</p> <p>ONE 6" green EXIT sign inside silver-colored BRUSH ALUMINUM FRAME</p> <p>TWO 6" green EXIT signs inside silver-colored BRUSH ALUMINUM FRAME = double-sided</p> <p>ONE 6" red EXIT sign inside silver-colored BRUSH ALUMINUM FRAME</p> <p>TWO 6" red EXIT signs inside silver-colored BRUSH ALUMINUM FRAME = double-sided</p> <p>ONE 6" green EXIT sign inside <b>BLACK</b> ALUMINUM FRAME</p> <p>TWO 6" green EXIT signs inside <b>BLACK</b> ALUMINUM FRAME = double-sided</p> <p>ONE 6" red EXIT sign inside <b>BLACK</b> ALUMINUM FRAME</p> <p>TWO 6" red EXIT signs inside <b>BLACK</b> ALUMINUM FRAME = double-sided</p>	<p>Dimensions:</p> <p>9" x 14 <sup>5</sup>/<sub>8</sub>"</p>	<p>Item-Nos:</p> <p>600126</p> <p>600128</p> <p>600127</p> <p>600129</p> <p>600111</p> <p>600112</p> <p>600113</p> <p>600114</p>
<p>ACCESSORIES FOR ALL SIGNS INSIDE ALU FRAME:</p>		
<p><b>BRACKET for Ceiling or Perpendicular Mount</b></p> <p>Silver-Colored Aluminum Bracket for ceiling mount or perpendicular wall mount (flag mount) for framed sign. Framed sign will hang about 1.5" away from ceiling or wall.</p>		<p>600055</p>
<p><b>BRACKET for 10" EXTENDED Ceiling Mount</b></p> <p>Silver-Colored 10" long extended length Aluminum Bracket for framed sign.</p>	<p><i>If this hanger is used, bracket 600055 is not required.</i></p>	<p>600056</p>
<p><b>BRACKET for 19.5" EXTENDED Ceiling Mount</b></p> <p>Silver-Colored 19.5" long extended length Aluminum Bracket for framed sign.</p>	<p><i>If this hanger is used, bracket 600055 is not required.</i></p>	<p>600057</p>

**Installation Instructions**  
**for PERMALIGHT® UL924-compliant Photoluminescent EXIT Signs**  
**listed by Underwriters Laboratories Inc**

PERMALIGHT® photoluminescent EXIT signs successfully passed the stringent requirements of UL-924 for 'Emergency Lighting and Power Equipment', July 11, 2001 edition.

>>>>>> **Save these Instructions!** <<<<<<

**Activation:** minimum 5 foot candles (54 lux) of unfiltered fluorescent lighting for 60 minutes  
CAUTION: EXTERNAL ILLUMINATION SOURCE REQUIRED

- Install PERMALIGHT® photoluminescent EXIT signs only in locations, where an external illumination source is present, is deemed reliable and is supplied by a circuit not controlled by automatic timers or sensors, and whose controls are accessible only to authorized personnel. This reliable external illumination source is to be energized at all times during building occupancy!
- Should any changes in your external lighting types or lighting levels occur, make sure that the PERMALIGHT® photoluminescent EXIT sign is still being illuminated with minimum 5 foot candles (54 lux) of unfiltered fluorescent lighting.
- Periodically clean the PERMALIGHT® photoluminescent EXIT sign face with a damp cloth. Do not use any thinners or solvents on the sign face.
- Check with your applicable installation codes (such as NFPA 101 – Life Safety Code) to perform periodic visibility tests.
- PERMALIGHT® photoluminescent EXIT signs are intended for INDOOR use only. Do not expose to direct sunlight, liquid spray, or temperatures outside the range 10°C - 40°C (50°-104°F).
- The sign should be charged for minimum 60 minutes to obtain full operation conditions.
- The sign should be mounted in a manner that ensures rigidity and mechanical sufficiency.

**Viewing Distance:** 50 foot viewing distance

**Installation:**

1. using installation accessories (4 clips, 4 screws, 4 anchors, 1 Allen wrench) for hidden flat wall mount: once installed, neither screw heads nor clips visible for an elegant and tamper-resistant sign installation.
2. using optional brackets for ceiling or perpendicular mount: Item-Numbers: 600055, 600056, 600057.

**Directional Indicators:** 2 self-adhesive directional indicators are supplied with each sign. Small dots are provided to the left of the letter E and to the right of the letter T for easy alignment. If your PERMALIGHT® EXIT sign is to be located other than directly over an exit, apply a directional indicator to the left of the E, pointing left, or to the right of the T, pointing right, or both, as appropriate.